





Installation Instruction:

1. Dry fit assembly first to cut tubes to size.
2. Place rubber gasket on overflow elbow using silicone seal between washer and tub.
3. Place shoe elbow under tub, using rubber washer between bottom of tub and shoe elbow.
4. Place a thin bead of silicone sealant on underside of strainer and between bottom of tub.
5. Screw in strainer through the tub into shoe elbow. Use pliers or a strainer wrench to secure strainer to tub.
6. Wipe off any excess silicone with a clean towel.
7. Position slip nut and washer on the waste tube and overflow tube with slip nut facing on wards.
8. Set tee in place and tighten slip nuts after tee is in position.
9. Attach cover plate to overflow elbow using 1/4" screws.
10. Tighten up all slip joint nuts and test for leaks by filling up the tub.


Installation Instruction:

1-1/2" Extension tube for deeper tub overflow.

1. Measure and cut extension tube to required length.
2. Position nut then washer on tailpiece.
3. Slip tailpiece into top of 1-1/2" extension tube.
4. Position nut then washer on 1-1/2" extension tube.
5. Connect end of 1-1/2" extension tube to drain.
6. Tighten all nuts check for leaks.

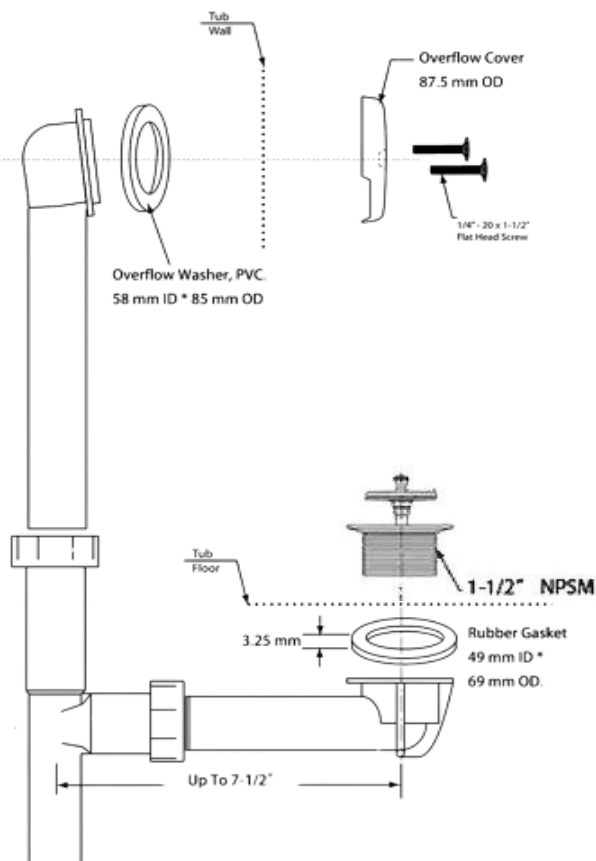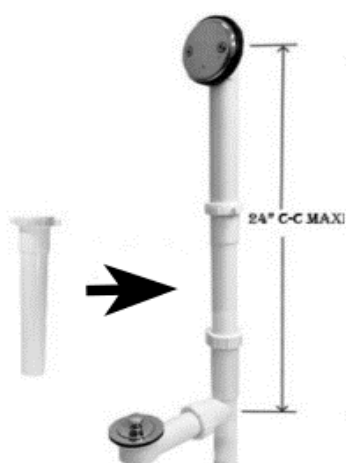

Tools Need:

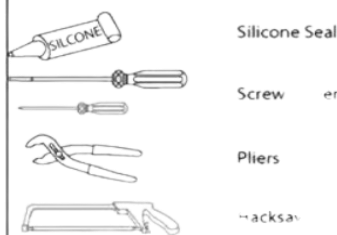

Warning:

- 1). Product can be cleaned with a cloth and warm soapy water. Non abrasive, solvent free cleaners can also be used.
- 2). Read the installation and use instructions in.